# www.philips.com/welcome

HTS9221 HTS9241





EN User manual

DA Brugervejledning

DE Benutzerhandbuch

ΕL Εγχειρίδιο χρήσης

ES Manual del usuario

FI Käyttöopas

FR Mode d'emploi

IT Manuale utente

NL Gebruiksaanwijzing

 $NO \ \textbf{Brukerh} \\ \text{åndbok} \\$ 

PT Manual do utilizador

SV **Användarhandbok** 

TR Kullanım kılavuzu



# Contents

1	Using help Navigate the onscreen help	2
2	Help and support Update your onscreen help Tutorials FAQs Contact Philips	3 3 4 4 4
3	Notice Open source software Trademarks	4 4 4
4	Important Safety Care for your product Care of the environment 3D health warning	6 6 7 7 8
5	Your home theater Main unit Remote control	8 8 9
6	Connect your home theater Speakers Connectors Connect to TV Connect audio from TV and other devices Computers and the Internet Name your home theater	11 12 13 14 15 16

7	Use your home theater	17
	Choose sound	17
	Discs	18
	USB storage devices	20
	DivX	21
	Audio, video, and picture options	22
	Radio	23
	MP3 player	24
	iPod or iPhone	24
	Browse PC through DLNA	26
	Browse NetTV	28
	Rent online video	29
	Multiview	30
	EasyLink	30
	,	
8	Change settings	31
	Picture	31
	Sound	32
	Language	33
	Parental control	33
	Energy saving	34
	Apply factory settings	34
9	Update software	35
	Check software version	35
	Update software through the Internet	35
	Update software through USB	35
10	Product specifications	36
11	Troubleshooting	39
12	Language code	42
13	Index	43

# 1 Using help

Philips is committed to develop products that contribute to a greener environment. To save paper and the environment, access the help on your home theater through the onscreen interface.


The onscreen help contains all the information that you need to set up your home theater. However, if you prefer to print the user manual, download the PDF version from www.philips.com/ support. Follow the instructions on the website to select your language, and then enter your model number.

Access the onscreen help by pressing **HELP** (yellow button) on your remote control.

The onscreen help has two panels.

- The left panel contains the Contents and Index. Navigate the Contents or Index to select a page.
- The right panel contains the content of each page. Select **Related topics** for additional help on the content.

# Navigate the onscreen help

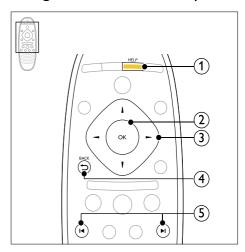

- 1 HELP Access the onscreen help.
- ② OK
  Display the selected page, or expand topics in Contents.
- (3) Navigation buttons
  - Up: Scroll up or move to the previous page.
  - Down: Scroll down or move to the next page.
  - Right: Navigate to the right panel or next index entry.
  - Left: Navigate to the left panel or previous index entry.
- (4) → BACK

Move up in the **Contents** or **Index**. From the right panel, move to the **Contents** on the left panel.

- (5) I ✓ / ►I (Previous/Next)
  - I◄: Display the last viewed page in history.
  - Display the next page from history.

# 2 Help and support

Watch video tutorials, download a software update, and find answers to many frequently answered questions (FAQs) on your product at www.philips.com.

# Update your onscreen help

Philips continually tries to improve its products. To make sure that your onscreen help is up to date with the latest information, update your home theater with the latest onscreen help. Download the latest help from www.philips.com/support.

#### What you need

- A USB flash drive, with at least 35MB of memory. The USB flash drive must be FAT or NTFS formatted. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows® or Stufflt® for Macintosh®).

# Step 1: Check the current version of help

Check the current version of onscreen help installed in your home theater. If the version is lower than the version available at www.philips.com/support, download and install the latest onscreen help.

The last two digits indicate the version of the onscreen help installed in your home theater. For example, if the version in the home theater is 'Subsystem SW: 35-00-00-05', '05' represents the version of the onscreen help currently installed.

- 1 Press ♠ (Home).
- Select [Setup], and then press OK.
- 3 Select [Advanced] > [Version Info.], and then press OK.

# Step 2: Download the latest onscreen help

Connect a USB flash drive to your computer.

- 2 In your web browser, go to www.philips. com/support.
- At the Philips support website, find your product and click on **User manuals**, and then locate the **User Manual Upgrade**Software.
  - → The help update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the help update file in the root directory of the USB flash drive.
  - → A file named 'HTSxxxxeDFU.zip' is extracted under the **UPG\_ALL** folder of your USB flash drive, 'xxxx' being the model number of your home theater.
- 6 Disconnect the USB flash drive from your computer.

## Step 3: Update onscreen help

# !

#### Caution

- Before you connect the USB flash drive to your home theater, make sure that there is no disc in the disc compartment, and the disc compartment is closed.
- 1 Switch on the TV.
- 2 Connect the USB flash drive containing the downloaded file to your home theater.
- 3 Press ♠ (Home).
- Enter 338 on the remote control.
  - → Follow the instructions on the TV to confirm the update. Do not switch off the home theater or remove the USB flash drive during the update.
- 5 Disconnect the USB flash drive from the home theater.



#### Warning

- If power fails during the update, do not remove the USB flash drive from the home theater.
- If an error occurs during the update, retry the procedure. If the error reoccurs, contact Philips Consumer Care.

# **Tutorials**

To set up your home theater and get additional information, refer to the video tutorials at www. philips.com/support.

# **FAQs**

If you have a problem, refer to the frequently asked questions (FAQs) for this home theater at www.philips.com/support.

If you still need help, contact Philips Consumer Care in your country.



#### Warning

 Do not attempt to repair your home theater yourself. This may cause severe injury, irreparable damage to your home theater, or void your warranty.

# Contact Philips

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Note the numbers before you call Philips:

Todel 140	·	
Serial No.		

# 3 Notice

This section contains the legal and trademark notices.

# Open source software

Philips Electronics Singapore Pte Ltd hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open.source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands". If you do not receive timely confirmation of your letter, please email to the email address above. The texts of the licenses and acknowledgements for open source software used in this product are included in the user manual.

# **Trademarks**



"Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of Blu-ray Disc Association.



'DVD Video' is a trademark of DVD Format/ Logo Licensing Corporation.



Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.



#### BONUSVIEW™

'BD LIVE' and 'BONUSVIEW' are trademarks of Blu-ray Disc Association.

## 

'AVCHD' and 'AVCHD' logo are trademarks of Matsushita Electric Industrial Co., Ltd and Sony Corporation.

## x.v.Colour

'x.v.Colour' is a trademark of Sony Corporation.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, and DTS-HD Master Audio | Essential and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DivX°, DivX Certified°, DivX Plus<sup>TM</sup> HD and associated logos are trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified \* device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance



"Made for iPod" and "Make for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.



SDHC Logo is a trademark of SD-3C, LLC.

CLASS 1 LASER PRODUCT

# 4 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

# Safety

#### Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

#### Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

#### Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.

- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

#### Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

#### Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

#### Risk of swallowing batteries!

 The product/remote control may contain a coin type battery, which can be swallowed.
 Keep the battery out of reach of children at all times!

# Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

# Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

# 3D health warning


If you or your family has a history of epilepsy or photosensitive seizures, consult a medical professional before exposing yourself to flashing light sources, rapid image sequences or 3D viewing.

To avoid discomfort such as dizziness, headache or disorientation, we recommend not watching 3D for extended periods of time. If you experience any discomfort, stop watching 3D and do not immediately engage in any potentially hazardous activity (for example driving a car) until your symptoms have disappeared. If symptoms persist, do not resume watching 3D without consulting a medical professional first. Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended for children under six years of age as their visual system is not fully developed yet.

#### 5 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

## Main unit

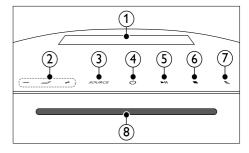


- Display panel
- ∠ +/- (Volume) Increase or decrease volume.
- (3) SOURCE Select an audio or video source for the home theater.
- (4)  $\circ$  (Standby-On) Switch the home theater on or to standby.
- (5) ► II (Play/Pause) Start, pause or resume play.
- (6) **■** (Stop) Stop play.
- (7) ▲ (Open/Close) Open or close the disc compartment, or eject the disc.
- (8) Disc compartment

### Remote control

This section includes an overview of the remote control.


#### Overview

Control your home theater with the remote control.

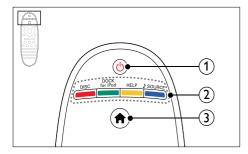

- 1 (Standby-On)
  - Switch the home theater on or to standby.
  - When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.
- 2 Source buttons / Color buttons
  - Color buttons: Select tasks or options for Blu-ray discs.
  - DISC: Switch to disc source.
  - DOCK for iPod: Switch to Philips dock for iPod or iPhone.
  - **HELP**: Access the onscreen help.
  - SOURCE: Select an audio input source or radio source.
- 3 ♠ (Home)

Access the home menu.

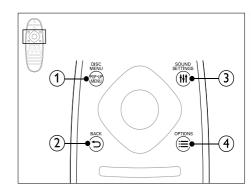


### (1) POP-UP MENU/DISC MENU

Access or exit the disc menu when you play a disc.

- 2 SACK
  - Return to a previous menu screen.
  - In radio mode, press and hold to erase the current preset radio stations.
- (3) HI SOUND SETTINGS

Access or exit sound options.

- (4) ≡ OPTIONS
  - Access more play options while playing a disc or a USB storage device.
  - In radio mode, set a radio station.

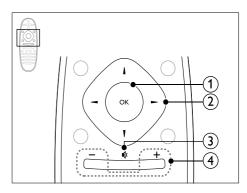


ok


Confirm an entry or selection.

- (2) Navigation buttons
  - Navigate menus.
  - In radio mode, press left or right to start auto search.
  - In radio mode, press up or down to tune the radio frequency.

- (Mute)
  Mute or restore volume.
- 4 +/- (Volume)
  Increase or decrease volume.

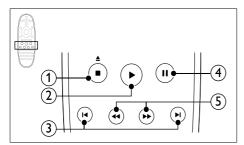

- (1) (Stop) / ≜ (Eject/ Open/Close)
  - Stop play.
  - Press and hold for three seconds to open or close the disc compartment, or eject the disc.
- 2 ► (Play) Start or resume play.
- (3) I ✓ / ►I (Previous/Next)
  - Skip to the previous or next track, chapter or file.
  - In radio mode, select a preset radio station.
- (4) II (Pause)
  Pause play.
- (5) ◀◀ / ▶▶ (Fast Backward/Fast Forward) Search backwards or forward. Press repeatedly to change the search speed.

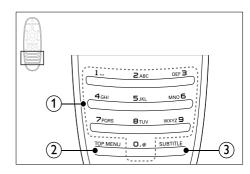

- (1) Alphanumeric buttons
  - Enter values or letters (using SMS style entry).
  - In radio mode, select a preset radio station.
- 2 TOP MENU
  Access the main menu of a video disc.
- 3 SUBTITLE
  Select subtitle language for video.

## EasyLink controls

With Easylink, you can control your home theater and the TV with the following buttons on your home theater remote control (see 'EasyLink' on page 30).

- O (Standby-On): Press and hold to switch your home theater, TV and the connected devices to standby.
- (Play): When a disc is in the disc compartment, wake up the TV from standby, and then play a disc.

# 6 Connect your home theater

This section helps you connect your home theater to a TV and other devices.

For information about the basic connections of your home theater and accessories, see the quick start guide. For a comprehensive interactive guide, see www.connectivityguide.philips.com.



#### Note

- For identification and supply ratings, refer to the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.


# **Speakers**

Position, connect, and set up your speakers for best surround sound.

#### **Position**

Speaker position plays a critical role in setting up a surround sound effect.

For best results, place your speakers and the subwoofer as shown below.

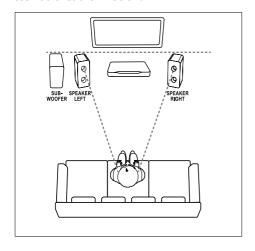



#### Note

 Surround sound depends on various factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics.

Follow these general guidelines, and then set up your subwoofer.

- **1** Seating position:
  - This is the center of your listening area.
- SPEAKER LEFT (speaker left) and SPEAKER RIGHT (speaker right) speakers: Place your left and right speakers in the front, and equidistant from the main unit in an arc, so that the two speakers are at same distance from your seating position. Place these speakers close to the ear level when you are seated.
- 3 SUBWOOFER (subwoofer):
  Place the subwoofer to the left or right of

#### Connect

Connect your speakers and the subwoofer to your home theater as described in the Quick start guide.

# Setup


Set up your subwoofer through the audio menu.

- 1 Connect your subwoofer as described in the Quick start guide.
- Press ♠ (Home) on your home theater remote control, and select [Setup] > [Audio] > [Subwoofer volume].
- 3 Listen to the test tones and change the volume.

## Connectors

Connect other devices to your home theater.


#### Side left



- (1) MUSIC iLINK


  Audio input from an MP3 player.

## Side right




 ≜ DOCK for iPod/iPhone iPod or iPhone dock.

### Rear left

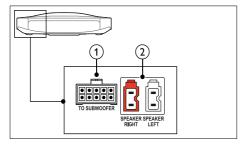

- 1 TO SUBWOOFER
  Connect to the supplied subwoofer.
- 2 SPEAKER RIGHT/SPEAKER LEFT Connect to the supplied speakers.


#### Rear center

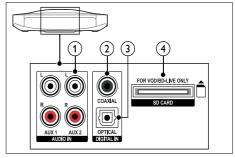

- (1) AUDIO IN-AUX 1/AUX 2
  Connect to an analog audio output on the
  TV or an analog device.
- 2 DIGITAL IN-COAXIAL

  Connect to a coaxial audio output on the
  TV or a digital device.
- 3 DIGITAL IN-OPTICAL Connect to an optical audio output on the TV or a digital device.
- 4 SD CARD-FOR VOD/BD-LIVE ONLY Slot for SD card. The SD card is used to rent online videos and access BD-Live.

## Rear right

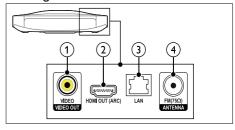

- (1) VIDEO OUT-VIDEO

  Connect to the composite video input on the TV.
- (2) HDMI OUT (ARC)
  Connect to the HDMI input on the TV.
- (3) LAN

  Connect to the LAN input on a broadband modem or router.
- (4) ANTENNA FM 75Ω Signal input from an antenna, cable or satellite.

# Connect to TV

Connect your home theater to a TV to watch discs. You can listen to audio from TV programs through your home theater speakers. Use the best quality connection available on your home theater and TV.

# Option 1: Connect to TV through HDMI (ARC)


#### Best quality video

Your home theater supports HDMI version 1.4 - Audio Return Channel (ARC). For easy and quick setup, connect your home theater to the TV through the HDMI ARC connection.

With HDMI ARC, you do not need an additional audio cable to play audio from TV through your home theater.

Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.

The **HDMI ARC** connector on the TV might be labeled **HDMI IN** or **HDMI**. For details on TV connectors, see the TV user manual.

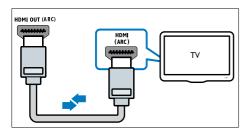

- 2 On your TV, turn on HDMI-CEC. For details, see the TV user manual.
  - When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater.
- If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up audio for connected devices' on page 15).

# Option 2: Connect to TV through HDMI


#### Best quality video

If your TV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

With a standard HDMI connection, you need an additional audio cable to play the audio from the TV through your home theater (see 'Connect audio from TV and other devices' on page 14).

Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.

The HDMI connector on the TV might be labeled **HDMI IN**.

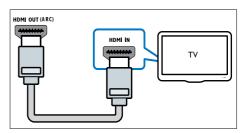

- 2 On your TV, turn on HDMI-CEC. For details, see the TV user manual.
  - When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater;
- To play audio from TV programs through your home theater, connect an additional audio cable (see 'Connect audio from TV and other devices' on page 14).
- 4 If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up audio for connected devices' on page 15).



#### Note

• If your TV has a DVI connector, you can use an HDMI/DVI adapter to connect to TV.


# Option 3: Connect to the TV through composite video

#### Basic quality video

If your TV does not have HDMI connectors, connect your home theater to the TV through a composite connection. A composite connection does not support high-definition video.

With a composite connection, you need an additional audio cable to play the audio from the TV through your home theater (see 'Connect audio from TV and other devices' on page 14).

Using a composite video cable, connect the VIDEO connector on your home theater to the composite video connector on the TV. The composite video connector might be labeled AV IN, VIDEO IN, COMPOSITE, or BASEBAND.



- On your TV, switch to the correct video input.
- To play audio from TV programs through your home theater, connect an additional audio cable (see 'Connect audio from TV and other devices' on page 14).

On your home theater, press **JSOURCE** repeatedly to select the correct audio input.

# Connect audio from TV and other devices

Play audio from TV or other devices through your home theater.

Use the best quality connection available on your TV, home theater, and other devices.




#### Note

- The audio connections in this user manual are only recommendations. You can use other connections too.
- When your home theater and TV are connected through HDMI ARC, an audio connection is not required.

# Option 1: Connect audio through a digital optical cable

#### Best quality audio

Using an optical cable, connect the OPTICAL connector on your home theater to the OPTICAL OUT connector on the TV or other device. The digital optical connector might be labeled SPDIF, SPDIF OUT, or OPTICAL.




# Option 2: Connect audio through a digital coaxial cable

#### Good quality audio

Using a coaxial cable, connect the COAXIAL connector on your home theater to the COAXIAL/DIGITAL OUT connector on the TV or other device.


The digital coaxial connector might be labeled **DIGITAL AUDIO OUT**.

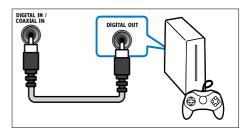

# Option 3: Connect audio through analog audio cables

#### Basic quality audio

Using an analog cable, connect the **AUX** connectors on your home theater to the **AUX** connectors on the TV or other device.

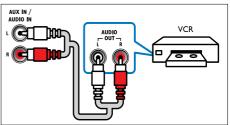

## Set up audio for connected devices

When you connect a device to your home theater, check the audio settings.

- On your TV and other devices, turn on HDMI-CEC. For details, see the user manual of the TV and the other device.
- Select 'Amplifier' from the TV speakers menu. For details, see the TV user manual.
- 3 On your home theater, turn on System Audio Control (see 'Control devices' on page 30).
- 4 Map the audio of the TV and other devices to the correct connectors on your home theater (see 'Map the audio input' on page 31). If the connected device is not HDMI-CEC compliant, press JSOURCE repeatedly on your home theater to select the correct audio input.

# Computers and the Internet

Connect your home theater to your computer network and the internet, and enjoy:

- Multimedia content streamed from your computer: Play music, photo, and video from a computer or other media server on your network (see 'Browse PC through DLNA' on page 26).
- Net TV (Not available in China):
   Browse Net TV services to access online information, games, news, music, and other services (see 'Browse Net TV' on page 28).
- Software update: Update the home theater software through the network (see 'Update software through the Internet' on page 35).

# Caution

 Before you try to connect the home theater to a computer network, familiarize yourself with the network router, media server software and networking principles. If necessary, read documentation that accompanies the network components. Philips is not responsible for lost, damaged, or corrupt data.

#### Wired connection


Connect your home theater to your router through a network cable.

#### What you need

- A network router (with DHCP enabled).
- A network cable (R)45 straight cable).
- A computer with media server software installed (see 'Set up media server software' on page 26).
- For Net TV and software update, make sure that the network router has access to the Internet, and is not restricted by firewalls or other security systems.

### Set up the wired network

Connect your home theater to your router as shown below, and then switch on the devices.

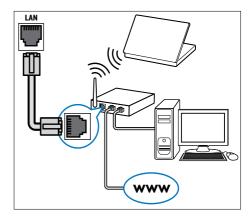

- 1 Connect the home theater to a network router through a wired connection (see 'Wired connection' on page 15).
- 2 Turn on your TV, and switch to the correct source for the home theater.
- 3 Press ♠ (Home).
- Select [Setup], and then press OK.
- Select [Network] > [Network Installation] > [Wired (Ethernet)], and then press OK.
- **6** Follow the instructions on the TV to complete the setup.
  - → The home theater connects to the internet. If connection fails, select [Retry], and then press OK.
- 7 Select [Finish], and then press OK to exit.

### Check wired network settings

1 Press ♠ (Home).

2 Select [Setup], and then press OK.

Select [Network] > [View Network Settings], and then press OK.

→ The current network settings are displayed.

#### Wireless connection

Connect your home theater to your router through a wireless connection.

#### What you need

- A network router (with DHCP enabled).
- A computer with media server software installed (see 'Set up media server software' on page 26).
- For Net TV and software update, make sure that the network router has access to the Internet and is not restricted by firewalls or other security systems.

## Set up the wireless network

Your home theater has built-in Wi-Fi for easy access to the wireless network. Connect your home theater to your router as shown below, and then switch on the devices.



1 Connect the home theater to a network router through a wireless connection (see 'Wireless connection' on page 16).

- 2 Turn on your TV, and switch to the correct source for the home theater.
- 3 Press ♠ (Home).
- Select [Setup], and then press OK.
  - Select [Network] > [Network Installation] > [Wireless (Wi-Fi)], and then press OK.
- **6** Follow the instructions on the TV to complete the setup.
  - → The home theater connects to the internet. If connection fails, select [Retry], and then press OK.
- 7 Select [Finish], and then press OK to exit.

## Check wireless network settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Network] > [View Wireless Settings], and then press OK.
  - → The current Wi-Fi settings are displayed.

# Name your home theater

To easily identify your home theater on a network, name your home theater.

- 1 Turn on your TV, and switch to the correct source for the home theater.
- 2 Press ♠ (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Network] > [Name your network], and then press OK.
- Fress the Alphanumeric buttons to enter the name.
- 6 Select [Confirm], and then press OK to exit.

# 7 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

#### Before you start

- Make the necessary connections described in the Quick start guide and the onscreen help.
- Complete the first-time setup. First-time setup appears when you turn on the home theater for the first time. If you do not complete the setup, you are prompted to complete it each time you turn on the home theater.
- Switch the TV to the correct source for the home theater.

# Choose sound

This section helps you choose the ideal sound for your video or music.

1 Press Ht SOUND SETTINGS.

Press the Navigation buttons (left/right) to access the sound options on the display.

Sound settings	Description
AUTO VOLUME	Set a constant volume for the speakers. This option is best for TV audio input where the commercial signal level is usually louder than the content.
SOUND	Select a sound mode.
SURROUND	Select surround sound or stereo sound.
TREBLE	Change the high frequency output.
MID	Change the middle frequency output.
BASS	Change the low frequency output.
AUD SYNC	Delay the audio to match the video.

3 Select an option, and then press **OK**.

Press **SACK** to exit.

If you do not press a button within a minute, the menu exits automatically.

#### Auto volume

Turn the auto volume on to keep the volume constant when you switch to a different source.

- 1 Press Ht SOUND SETTINGS.
- 2 Select AUTO VOLUME, and then press OK.
- 3 Press the Navigation buttons (up/down) to select ON or OFF.
- 4 Press **OK** to confirm.

#### Sound mode

Select predefined sound modes to suit your video or music.

Press ## SOUND SETTINGS.

2 Select SOUND, and then press OK.

Press the **Navigation buttons** (up/down) to select a setting on the display:

- MOVIE: Enjoy a cinematic audio experience, specially enhanced for movies.
- MUSIC: Recreate the original recording environment of your music, in the studio or at a concert.
- ORIGINAL: Experience the original sound of your movies and music, without added sound effects.
- **NEWS**: Hear every word with optimized speech and clear vocals.
- GAMING: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.
- 4 Press **OK** to confirm.

#### Surround sound mode

Experience an immersive audio experience with surround sound modes.

- Press ## SOUND SETTINGS.
- 2 Select **SURROUND**, and then press **OK**.

Press the **Navigation buttons** (up/down) to select the following settings:

- AUTO: Surround sound based on the audio stream.
- VIRTUAL SURR: Virtual Surround
- STEREO: Two-channel stereo sound. Ideal for listening to music.
- 4 Press OK to confirm.

## Equalizer

Change the high frequency (treble), mid frequency (mid), and low frequency (bass) settings of the home theater.

- 1 Press **HI SOUND SETTINGS**.
- 2 Select TREBLE. MID or BASS, and then press OK.
- Press the Navigation buttons (up/down) to change the frequency.
- Press **OK** to confirm

# Discs

Your home theater can play DVDs, VCDs, CDs, and Blu-ray discs. It can also play discs that you've made at home, such as CD-R discs of photos and music.

#### What you need For audio or 2D video:

- Audio and video connection between your home theater and the TV.
- An audio or a video disc

#### For 3D video:

- A 3D TV.
- An HDMI connection between your home theater and the TV.
- A Blu-ray 3D disc.
- A pair of 3D glasses that are compatible with your 3D TV.

# Play discs

- Insert a disc into the home theater.
  - → YourTV switches to the correct source and the disc plays automatically.
- If the disc does not play automatically, press **DISC** or select [play Disc] in the home menu, and then press OK.
- For a 3D video, put on your 3D glasses.
- Press the play buttons to control play (see 'Play buttons' on page 18).



 For a 3D video, during search forward or backward, and in some other play modes, the video displays in 2D. It returns to 3D display when you play normally again.



To avoid flickering, change the brightness of the display (see 'Display panel' on page 34).

# Play buttons

Button	Action
Navigation buttons	Navigate menus.
OK	Confirm an entry or selection.
►(Play)	Start or resume play.
Ш	Pause play.
	Stop play.
<b>I</b> ◀/▶I	Skip to the previous or next track, chapter or file.
<b>44</b> / <b>&gt;&gt;</b>	Fast backwards or fast forwards. Press repeatedly to change the search speed.
Navigation buttons (up/down)	Rotate the picture clockwise or counter-clockwise.
SUBTITLE	Select subtitle language for video.
POP-UP MENU/DISC MENU	Access or exit the disc menu.
<b>≡</b> OPTIONS	Access the advanced options when you play your audio, video, or media files (see 'Audio, video, and picture options' on page 22).

For video formats such as DivX and WMV:

- To stop play, press
- To resume the video from where you stopped, press ► (Play).
- To play the video from the start, press **OK**.

# Play 3D discs in 2D mode

If you do not have a 3D TV, watch the 3D disc in 2D mode.

- 1 Press **\Pi** (**Home**).
- Select [Setup] > [Video] > [Watch 3D video] > [Off].
- Press OK.
- Play your Blu-ray 3D disc.
  - → The 3D video is displayed in 2D.

## Skip menu for VCD and SVCD

Display the content menu on VCD and SVCD discs.

- 1 Press **A** (Home).
- Select [Setup] > [Preference], and then press OK.
- 3 Select [VCD PBC] > [On], and then press OK.



• To skip the content menu, select [Off].

# Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 Press HI SOUND SETTINGS.
- 2 Select AUD SYNC, and then press OK.
- Press the Navigation buttons (up/down) to synchronize the audio with the video.
- 4 Press **OK** to confirm.

# Bonus View on Blu-ray

On Blu-ray discs that support the Bonus View, enjoy extra content, such as a director's commentary, while you watch the main feature. Bonus View is also known as picture-in-picture.

- 1 Enable Bonus View (picture-in-picture) in the Blu-ray disc menu.
- While you play the main feature, press ≡ OPTIONS.
  - → The options menu is displayed.
- 3 Select [PIP Selection] > [PIP], and then press OK.
  - → Depending on the video, PIP option [1] or [2] is displayed.
  - → The picture-in-picture video is displayed in a small window.
- 4 Select [2nd Audio Language] or [2nd Subtitle Language], and then press OK.
- 5 Select the language, and then press OK.



Note

 To turn off Bonus View, press ≡OPTIONS, select [PIP Selection] > [Off], and then press OK.

## BD-Live on Blu-ray

On Blu-ray discs with BD-Live content, access additional features, such as internet chats with the director, the latest movie trailers, games, wallpaper, and ringtones.

#### What you need

- a Blu-ray disc with BD-Live content
- an internet connection
- a storage device:
  - a USB storage device, with at least 1 GB of memory, or
  - an SD memory card of type SDHC Class 6, with at least 8 GB of memory.



#### Note

- BD-Live services vary from country to country, and depend on the disc.
- When you use BD-Live, data on the disc and home theater are accessed by the content provider.

# Access BD-Live with a USB storage device

- 1 Connect your home theater to the home network and internet (see 'Computers and the Internet' on page 15).
- 2 Connect the USB storage device to the home theater.
  - The USB storage device is used to store the downloaded BD-Live content.
- 3 Press ♠ (Home).
- 4 Select [Setup], and then press OK.
- 5 Select [Advanced] > [Local Storage] > [USB], and then press OK.
- 6 Select the BD-Live icon in the disc menu, and then press **OK**.
  - → BD-Live starts to load. The loading time depends on the disc and your internet connection.
- 7 Press the Navigation buttons to navigate BD-Live, and then press OK to select an item.

#### Access BD-Live with an SD card

- 1 Connect your home theater to the home network and internet. (see 'Computers and the Internet' on page 15)
- Insert the SD memory card into the SD CARD slot on your home theater.
  - → The first time you insert an SD memory card, the card is formatted. After formatting, leave the card in the home theater (see 'Format an SD card' on page 29).
- 3 Press **♠** (Home).
- Select [Setup], and then press OK.
- 5 Select [Advanced] > [Local Storage] > [SD card], and then press OK.
- 6 Select the BD-Live icon in the disc menu, and then press **OK**.
  - → BD-Live starts to load. The loading time depends on the disc and your internet connection.
- Press the Navigation buttons to navigate BD-Live, and then press OK to select an item.

## Clear memory

If your storage device does not have enough memory for the BD-Live content, clear the memory on the storage device.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Clear memory], and then press OK.
  - → This clears the local memory and deletes the BD-Live files that you downloaded on your storage device.

#### Disable BD-Live

To restrict access to BD-Live, turn on the BD-Live security.

- 1 Press **A** (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [BD-Live security] > [On], and then press OK.
  - → BD-Live access is restricted.



#### Note

 You cannot restrict internet access on commercial Blu-ray discs.

# USB storage devices

Enjoy pictures, audio and video on a USB storage device.

#### What you need

- A USB storage device that is formatted for FAT or NTFS file systems, and complies with the Mass Storage Class.
- A USB extension cable, if the USB storage device does not fit into the connector.



#### Note

- You can use digital cameras connected by USB if they can play the files without using a special computer program.
- To play DivX DRM protected files from a USB storage device, connect your home theater to a TV through an HDMI cable.

# Play files

- 1 Connect the USB storage device to the home theater.
- 2 Press ♠ (Home).
  - → The home menu is displayed.
- 3 Select [browse USB], and then press OK.
  - → A content browser is displayed.
- Select a file, and then press OK.
- Press the playback buttons to control play (see 'Play buttons' on page 21).

### Play buttons

Button	Action
Navigation buttons	Navigate menus.
OK	Confirm an entry or selection.
►(Play)	Start or resume play.
II	Pause play.
	Stop play.
<b>I</b> ◀ / ▶ <b>I</b>	Skip to the previous or next track, chapter or file.
<b>44/</b>	Fast backwards or fast forwards. Press repeatedly to change the search speed.
Navigation buttons (up/down)	Rotate the picture clockwise or counter-clockwise.
SUBTITLE	Select subtitle language for video.
<b>≡</b> OPTIONS	Access the advanced options when you play your audio, video, or media files (see 'Audio, video, and picture options' on page 22).

For video formats such as DivX and WMV:

- To stop play, press
- To resume the video from where you stopped, press ► (Play).
- To play the video from the start, press **OK**.

# DivX

Play DivX videos from:

- a disc (see 'Discs' on page 18),
- a USB storage device (see 'USB storage devices' on page 20), or
- an online video store (see 'Rent online video' on page 29).



#### Note

 To play DivX DRM protected files from a disc, a USB storage device, or an online video store, connect your home theater to a TV through an HDMI cable.

#### VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

1 Press ♠ (Home).

Select [Setup], and then press OK.

Select [Advanced] > [DivX® VOD Code], and then press OK.

→ The DivX VOD registration code for your home theater is displayed.

#### **Subtitles**

If your video has subtitles in multiple languages, select a subtitle language.

1 While playing video, press **SUBTITLE** to select a language.



#### Note

- Make sure that the subtitle file has the same name as the video file. For example, if the video file is named 'movie.avi', save the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater can play subtitle files in the following formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. These files do not appear in the file navigation menu.
- If the subtitles do not appear correctly, change the character set.

#### Subtitle character set

If the subtitles do not appear correctly, change the character set that supports the DivX subtitle.

- 1 Press **≡ OPTIONS**.
  - → The options menu is displayed.
- Press the Navigation buttons to select [Character Set], and then press OK.
- **3** Select a character set.

Character Set	Language
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish
[Central Europe]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian
[Greek]	Greek

# Audio, video, and picture options

Use advanced features when you play audio, video, or media files from a disc or a USB storage device.

# Audio options

While playing audio, repeat an audio track, a disc, or a folder.

- 1 Press **≡ OPTIONS** repeatedly to cycle through the following functions:
  - RPT TRACK / RPT FILE: Repeat the current track or file.
  - RPT DISC / RPT FOLDER: Repeat all the tracks on the disc or the folder.
  - RPT RANDOM: Play audio tracks in random order.
  - RPT OFF: Turn off the repeat mode.

# Video options

While watching video, select options such as subtitles, audio language, time search, and picture settings. Depending on the video source, some options are not available.

- 1 Press **≡ OPTIONS**.
  - → The video options menu is displayed.
- Press the Navigation buttons and OK to select and change:
  - [Audio Language]: Select audio language for video.
  - [Subtitle Language]: Select subtitle language for video.
  - [Subtitle Shift]: Change the subtitle position on the screen.
  - **[Info]**: Display information about what is playing.
  - [Character Set]: Select a character set that supports the DivX subtitle.
  - [Time Search]: Skip to a specific part of the video by entering the time of the scene.
  - [2nd Audio Language]: Select the second audio language to play.
  - [2nd Subtitle Language]: Select the second subtitle language to play.
  - [Titles]: Select a specific title.
  - **[Chapters]**: Select a specific chapter.
  - [Angle List]: Select a different camera angle.
  - [Menus]: Display the disc menu.
  - **[PIP Selection]**: Display Picture-in-Picture window.
  - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
  - [Repeat]: Repeat a chapter or title.
  - [Repeat A-B]: Mark two points within a chapter or track to repeat play, or turn off the repeat mode.
  - [Picture Settings]: Select a predefined color setting.

# Picture options

While viewing a picture, zoom into the picture, rotate it, add animation to a slideshow, and change the picture settings.

1 Press **≡ OPTIONS**.

→ The picture options menu appears.

- Press the Navigation buttons and OK to select and change the following settings:
  - [Rotate +90]: Rotate the picture 90 degree clockwise.
  - [Rotate -90]: Rotate the picture 90 degree counter-clockwise.
  - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
  - [Info]: Display picture information.
  - **[Duration per slide]**: Select the display speed for each picture in a slide show.
  - [Slide Animation]: Select animation for the slide show.
  - [Picture Settings]: Select a predefined color setting.
  - [Repeat]: Repeat a selected folder.

#### Slideshows

While playing a video or music, access fun features such as picture and musical slideshows.

#### Picture slideshows

View a slideshow of your pictures stored in your disc or a USB storage device.

- 1 Select a picture from a disc or USB storage device, and then press **OK**.
- 2 Press ≡ OPTIONS.
- Press Navigation buttons and OK to select the following settings:
  - [Slide Animation]: Select an animation for the slideshow.
  - [Duration per slide]: Select a display speed for each picture in a slideshow.
- 4 Press to stop the slideshow.

#### Musical slideshows

Create a musical slideshow to play music and pictures at the same time.

- 1 Select a music track, and then press **OK**.
- Press S BACK, and go to the picture folder.
- 3 Select a picture, and then press **OK** to start the slideshow.
- 4 Press to stop slideshow.
- 5 Press again to stop music.

## Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.

#### What you need

FM antenna.



Note

- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

#### Tune stations

- 1 Connect the FM antenna as described in the Quick start guide.
- Press SOURCE repeatedly until RADIO appears on the display panel.
  - → If you have already installed the radio stations, the last channel that you listened to is played.
  - If you have not installed any radio stations, the message AUTO INSTALL... PRESS PLAY appears on the display panel. Press ▶(Play).
- 3 Press the following buttons to listen or to change radio stations:

Button	Action
I ✓ / ►I or Alphanumeric buttons	Select a preset radio station.
Navigation buttons (left/ right)	Search for a radio station.
Navigation buttons (up/ down)	Fine tune a radio frequency.
	Press to stop the installation of radio stations.
<b>⇒</b> BACK	Press and hold to erase the preset radio station.
<b>≡</b> OPTIONS	Manual: Press once to access program mode, and press again to store the radio station. Automatic: Press and hold for three seconds to reinstall the radio stations.

#### Listen to radio

- Press SOURCE repeatedly until RADIO appears on the display panel.
  - To listen to a preset station, press I
     or ►I.
  - To search for a radio station, and then listen, press Navigation buttons (left/ right).
- 2 Press +/- (Volume) to change the volume.

# MP3 player

Connect your MP3 player to play your audio files or music.

#### What you need

- An MP3 player.
- An 3.5mm stereo audio cable.

# Play music

- Connect the MP3 player to the home theater as described in the Quick start guide.
- Press > SOURCE repeatedly until MUSIC I-LINK appears on the display panel.
- 3 Press the buttons on the MP3 player to select and play audio files or music.

# iPod or iPhone

Use the dock of your home theater to play music, movies and photos from your iPod or iPhone.

#### What you need

An HDMI cable.



Note

 Charge your iPod/iPhone on the dock while the home theater is in iPod mode.

# Dock your iPod or iPhone

- 1 Press **≜ DOCK for iPod/iPhone** to open the iPod/iPhone dock of your home theater.
- 2 Connect the HDMI cable to your home theater and the TV.
- 3 Switch on the iPod or iPhone, and place it on the dock.

## Play music

- 1 Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 24).
- 2 Press DOCK for iPod on the home theater remote control
- 3 Browse on the iPod or iPhone screen to select music tracks.
  - To view the playlist on your TV and use the home theater remote control to select a track, press DOCK for iPod again.

## Play video and slideshows



Note

- On iPod, enable the TV ON setting.
- On iPhone, select the TV Out option.
- 1 Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 24).
- 2 Press ♠ (Home).
- 3 Select [browse iPod], and then press OK.
- 4 Switch the TV to the **AV/VIDEO** source (corresponding to the HDMI cable).
  - → The TV screen goes blank.
- 5 Press DOCK for iPod.
  - → The playlists are displayed on the TV.
- 6 Press the Navigation buttons and OK to select and play videos or photos.

#### Use iPhone

Turn your iPhone into a virtual remote control, or use it to browse the contents of a disc or USB storage device on your home theater.

#### What you need

- An iPhone (iOS 3.1.3 and above).
- A wired or wireless home network.

#### Before you start

- Connect your home theater to your home network (see 'Computers and the Internet' on page 15).
- Name your home theater (see 'Name your home theater' on page 16).
- Connect your iPhone to the same home network. For details, see your iPhone user manual.

## Download the application

Download the Philips application, **AV REMOTE** (AV Remote) from Apple's **App Store** (App Store). This application is free.

- 1 Tap the App Store (App Store) icon on your iPhone.
- Search for 'Philips AV REMOTE' in the App Store (App Store).
- Follow the instructions on your iPhone to download the application.
  - → The AV REMOTE (AV Remote) icon is added to the home screen of your iPhone.

# Access the smartphone application

Access the **AV REMOTE** application from your iPhone, and then identify your home theater on the home network.

- 1 Tap AV REMOTE (AV Remote) on your iPhone.
  - The iPhone searches your home network. Your home theater and the other devices on the network are displayed on your iPhone. A browsing bar with **Devices**, **Remote**, and **Source** tabs is also displayed.
- 2 Tap your home theater on the iPhone.
  - → The virtual remote control is displayed on the iPhone
- If your home theater is not found, check the network connection (see 'Computers and the Internet' on page 15).
  - Then, tap the **Devices** (Devices) tab on your iPhone to search again.
- 4 To exit the application, press the home button on your iPhone.

# Use your iPhone as a remote control

The virtual remote control is displayed in three screens on the iPhone. To access the buttons, swipe the iPhone screen to the left or right. Only the control buttons that are relevant to the play mode are enabled on your iPhone. For example, if you play pictures, only the remote control buttons that are used to control the pictures are enabled. However, if you play a video, additional buttons, such as **SUBTITLE** and **TOP MENU**, are enabled on your iPhone.

- 1 Launch the application on your iPhone (see 'Access the smartphone application' on page 25).
  - Depending on the play mode, the relevant remote control buttons are enabled.
- 2 Swipe to the left or right screen to access more buttons
- If the remote control buttons do not appear, tap the **Remote** (Remote) tab on your iPhone.



#### Note

Some control functions are not available on iPhones

# Browse a disc or USB storage device from iPhone

Browse a disc or USB storage device from your iPhone, and play an audio, video, or multimedia file.

- 1 Launch the remote control application on your iPhone (see 'Access the smartphone application' on page 25).
- 2 Load a data disc or connect a USB storage device into your home theater.
- 3 On your iPhone, tap the Source (Source) tab, and then select the DISC (DISC) or USB (USB).
  - → The folders in your disc or USB storage device are displayed.
- 4 Select a folder to browse, and then select a file to play.
  - → The relevant remote control buttons are enabled on your iPhone.
- 5 To access the remote control while you browse the contents, tap the **Remote** (Remote) tab on your iPhone.

# Browse PC through DLNA

When you connect your home theater to your home network, you can enjoy music, photo, and video stored on a computer or other media server on the network.

#### What you need

- A wired or wireless home network, connected with a Universal Plug and Play (uPnP) router.
- A Philips wireless USB adapter or a LAN cable to connect your home theater to your home network.
- A media server such as:
  - PC running Windows Media Player 11 or higher; or
  - Mac running Twonky Media Server.



 For help to use other media servers, such as TVersity, see the web site of the media server.


# Set up media server software

To enable media sharing, set up the media server software.

#### Before you start

- Connect your home theater to your home network (see 'Computers and the Internet' on page 15).
- Connect your computer to the same home network.
- Make sure that your PC firewall allows you to run Windows Media Player programs.
- Switch on your computer and the router.

# Microsoft Windows Media Player 11



- 1 Start Windows Media Player on your PC.
- Click the Library tab, and then select Media Sharing.



- The first time you select Media Sharing on your PC,a pop-up screen appears. Check the Share my media box and click OK.
  - → The **Media Sharing** screen is displayed.
- In the Media Sharing screen, make sure that you see a device marked as Unknown Device.



- If you don't see an unknown device after a minute or so, check that your PC firewall is not blocking the connection..
- **5** Select the unknown device and click **Allow**.
  - → A green tick is appeared next to the device.
- By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, select Library > Add to Library.



- → The Add to Library screen is displayed.
- → If necessary, select Advanced options to display a list of monitored folders.



- 7 Select My folders and those of others I can access, and then click Add.
- 8 Follow the onscreen instructions to add the other folders that contain your media files.

# Microsoft Windows Media Player 12



- Depending on your version of Microsoft Windows, the screens might look different to the following screens.
- 1 Start Windows Media Player on your PC.
- In Windows Media Player, click the Stream tab, and then select Turn on media streaming.
  - → The Media streaming options screen is displayed.



3 Click Turn on media streaming.



- → You return to Windows Media Player screen.
- 4 Click the Stream tab and select More streaming options.
  - → The **Media streaming options** screen is displayed.



- 5 Make sure that you see a media program in the Local network screen.
  - If you don't see a media program, check that your PC firewall is not blocking the connection.
- 6 Select the media program and click Allowed.
  - → A green arrow is appeared next to the media program.
- By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, click the Organize tab and select Manage libraries > Music.
  - → The Music Library Locations screen is displayed.



Follow the onscreen instructions to add the other folders that contain your media files.

## Macintosh OS X Twonky Media (v4.4.2)



#### Note

- Depending on which version of the Mac operating system you use, your screens might look different to the following screens.
- Visit http://www.twonkymedia.com to purchase the software, or download a free 30-day trial to your Macintosh.
- 2 Start Twonky Media on the Macintosh.
- In the Twonky Media Server screen, select Basic Setup and First Steps.
  - → The **First steps** screen is displayed.



- 4 Type a name for your media server, and then click **Save changes**.
- Back in the Twonky Media screen, select Basic Setup and Sharing.
  - → The Sharing screen is displayed.



- 6 Browse and select folders to share, and then select **Save Changes**.
  - Your Macintosh rescans the folders automatically so that they are ready to share.

## Play files from your PC



#### Note

- Before you play multimedia content from the computer, make sure that the home theater is connected to the home network, and the media server software is properly set up.
- 1 Switch your TV to the correct HDMI source for your home theater.
- 2 Press ♠ (Home).
  - → The home menu is displayed.
- 3 Select [browse PC], and then press OK.
  - → A content browser is displayed.
- 4 Select a file, and then press **OK**.
- Fress the playback buttons to control play (see 'Play buttons' on page 21).

# **Browse Net TV**

#### Not available in China

When you connect your home theater to a home network and Internet, you can use Net TV to access videos, pictures, music, information, games, and other online services.



#### Note

 Koninklijke Philips Electronics N.V. bears no responsibility for content provided by Net TV service providers.

#### Watch Net TV

- 1 Connect your home theater to a home network and the Internet (see 'Computers and the Internet' on page 15).
- 2 Press ♠ (Home).
  - → The home menu is displayed.
- 3 Select [browse Net TV], and then press OK.
  - → The NetTV home page is displayed.
- 4 Press the Navigation buttons to navigate Net TV web pages or services.
- **5** Press **OK** to view or select an item.
- 6 Press → BACK to return to the previous page, or press ♠ (Home) to exit.

# Clear browsing history

Clear the browsing history to remove passwords, cookies, and browsing data from your home theater.

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
- 3 Select [Network] > [Clear Net TV Memory], and then press OK.

#### Net TV location

To receive Net TV services from a particular country, set the Net TV user location.

- 1 Press **\(\Pi\)** (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Network] > [Net TV User Location], and then press OK.
  - → The current location for NetTV services is displayed.
- 4 Press the Navigation buttons to select a different Net TV location.

# Rent online video

#### Not available in China

Rent videos from online stores, through your home theater. You can watch them right away or later.

Many online video stores offer a huge choice of video, with different rental prices, periods, and conditions. For some stores, you must create an account before you can rent.

#### What you need

- A high-speed internet connection to the home theater.
- An HDMI connection between your home theater and TV.
- An SD memory card of type SDHC Class 6, with at least 8 GB of memory.

#### Format an SD card

Before you download any online video or BD-Live content, your SD card must be in the SD card slot of your home theater, and formatted.

- 1 Switch your TV to the correct HDMI source for your home theater.
- Insert the SD memory card into the SD CARD slot on your home theater.



- Follow the onscreen instructions to format the card.
  - → Any content on the card is erased during formatting.
- 4 After formatting, leave the card in the SD CARD slot.

## Rent and play online video

- 1 Connect your home theater to the home network and internet (see 'Computers and the Internet' on page 15).
- 2 Press ♠ (Home).
- 3 Select [browse Net TV], and then press OK.
  - → The online services available in your country are displayed.
- 4 Press the Navigation buttons to go to a video store, and then press OK.
- 5 If prompted, follow the video store instructions to register or log in to an account.
  - → You see an option to rent videos.
  - → If you have rented videos and are still
    within the rental period, you also see an
    option to watch the videos.
- 6 Follow the video store instructions to rent or watch a video.
  - The video is downloaded to your SD memory card. You can watch it now or at any time within the rental period.
  - When you have downloaded a video to your card, you can watch it only on your home theater. You can't move the card and watch it on another device.
  - If you move the card and format it in another device, your downloaded video is erased. Download your video again before you watch.
- 7 Press the play buttons on your remote control to play, pause, search, or stop the video.

## Multiview

You can watch two video sources side by side on some of the Philips TVs. The sources can be:

- · video from your home theater,
- TV broadcasts, and
- Net TV.

For information about how to set up multiview, see your TV user manual.

# **EasyLink**

The home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI can be controlled by a single remote control.

Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

#### What you need

- HDMI-CEC compliant devices.
- An HDMI connection between the connected devices.

#### Switch on

- On the TV and other connected devices, turn on the HDMI-CEC operations. For details, see the manual of the TV or other devices.
- 2 Press ♠ (Home).
  - Select [Setup], and then press OK.
- 4 Select [EasyLink] > [EasyLink], and then press OK.
- **5** Select [On], and then press **OK**.

#### Control devices

Control the home theater and the other connected HDMI-CEC compliant devices with a single remote control.

#### One-touch play

If you enable One-touch play, the TV automatically switches to the correct channel when you play a disc in your home theater.

#### One-touch standby

When you press and hold  $\circlearrowleft$  (Standby) on the remote control, the home theater and all the connected HDMI-CEC devices (that support one-touch standby) switch to the standby mode.

If one-touch standby is enabled on your home theater, you can switch to standby with the remote control of the TV or other HDMI-CEC devices.

#### System Audio Control

When you play a device that has its audio output routed to the home theater, the home theater switches to the corresponding audio source automatically.

To use one-touch audio, turn on System Audio Control and follow the instructions on the TV to map connected devices to the audio input connectors of the home theater.

#### Audio Input Mapping

When you connect a new device to your home theater, map the device to the audio input connector (see 'Map the audio input' on page 31)

# Select speaker output

Play the audio from a connected device through your home theater.

1 Press ♠ (Home).

Select [Setup], and then press OK.

3 Select [EasyLink] > [System Audio Control] > [On], and then press OK.

4 Map the audio output of the HDMI TV and other HDMI-CEC compliant devices to the audio inputs on your home theater.



Note

 To play the audio from the TV speakers, select [EasyLink] > [System Audio Control] > [Off].

## Map the audio input

When you connect an HDMI-CEC device to your TV or your home theater, map the audio of the connected device to your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [EasyLink] > [Audio Input Mapping], and then press OK.
- 4 Follow the instructions on the TV screen to map the audio input of the connected device.



 If you connect your home theater to the TV through an HDMI ARC connection, the TV audio is automatically mapped to the home theater.

# 8 Change settings

This section helps you to change the settings of your home theater.



#### Caution

 Most of the settings are already configured with the best value for your home theater.
 Unless you have a reason to change a setting, it is best to leave it at the default value.



#### Note

- · You cannot change a setting that is grayed out.
- To return to the previous menu, press → BACK. To exit the menu, press ♠ (Home).

# **Picture**

Change the picture settings to suit your preferences.



#### Note

 The best setting is automatically selected for the TV. If you change the setting, make sure that the TV supports the new settings.

# Picture settings and format

- 1 Press ♠ (Home).
- Select [Setup], and then press OK.
- Select [Video], and then press OK.
- 4 Change the following settings, and then press **OK**:
  - **[TV Display]**: Picture format.
  - [Picture Settings]: Predefined color settings.

#### Picture color

Deep Color recreates the natural world on your TV screen and displays vivid images in over a billion of colors.

If your TV supports Deep Color and is connected to your home theater through an HDMI cable, you can change the Deep Color.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video] > [HDMI Deep Color], and then press OK.
- Select the following options, and then press OK:
  - [Auto]: Automatically select HDMI deep color.
  - [On]: View vivid images.
  - [Off]: Display standard 24-bit color.

#### Picture resolution

For HDMI video settings, connect your home theater to the TV through an HDMI cable.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video] > [HDMI Video], and then press OK.
- Change the HDMI resolution setting, and then press **OK**.

# Blu-ray 3D video

To play 3D video, connect your home theater to a 3D TV through an HDMI cable.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video] > [Watch 3D video] > [Auto], and then press OK.

# Subtitle position

Automatically change the position of the subtitles to fit your TV screen.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
  - Select [Preference] > [Auto Subtitle Shift] > [On], and then press OK.

## Sound

Change the sound settings to suit your preference.

#### HDMI audio

To hear an HDMI audio output from your TV, connect your home theater to the TV through an HDMI cable.

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [HDMI Audio], and then press OK.
- 4 Select the following options, and then press **OK**:
  - [Bitstream]: Enable bitstream output over HDMI.
  - [Auto]: Automatically select the best supported audio format.
  - [Off]: Disable audio from the TV.

# Audio post processing

To select a predefined sound mode, enable audio post processing at the speaker (see 'Sound mode' on page 17).

- **1** Press **♠** (**Home**).
- Select [Setup], and then press OK.
- Select [Advanced] > [Enhanced Audio] > [On], and then press OK.



#### Vote

• To play the original audio of the disc, select **[Off]**.

# Night mode

For quiet listening, decrease the volume of loud sounds when you play discs. Night mode is only available for Dolby-encoded DVD and Blu-ray discs.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [Night Mode] > [On], and then press OK.

# Language

Select a language for the home menu, audio, and subtitles.

#### Home menu

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Menu language], and then press OK.
- 4 Select a menu language, and then press OK.

#### Disc audio

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Audio], and then press OK.
- 4 Select an audio language for discs, and then press **OK**.



- If your preferred disc language is not available, select [Other] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 42).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

### Disc subtitle

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Subtitle], and then press OK.
- 4 Select a subtitle language for discs, and then press **OK**.

### Disc menu

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Disc Menu], and then press OK.
- 4 Select a menu language for discs, and then press **OK**.



#### Vote

- If your preferred disc language is not available, select [Other] from the list, and enter the 4-digit language code found at the the end of this user manual (see 'Language code' on page 42).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

# Parental control

Restrict access to discs that are recorded with ratings.

#### **Password**

You can set or change your password to play a restricted disc.

- 1 Press **★** (**Home**).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Change Password], and then press OK.
  - → A change password menu is displayed.
- 4 Follow the instructions on the TV to set or change password.
  - If you do not have a password or you have forgotten, enter **0000**.
- 5 Press OK.

# Ratings

Some discs are recorded with ratings according to age. You can set up your home theater to play only discs with an age rating lower than your child's age.

- 1 Press **★** (**Home**).
- Select [Setup], and then press **OK**.
- Select [Preference] > [Parental Control], and then press OK.
  - → A message prompts you to enter the password.
- 4 Enter the password with the Numeric buttons.
- 5 Select an age rating, and then press **OK**.
  - To play all discs irrespective of the rating, select level 8 or [Off].

# **Energy saving**

Save energy by changing the following settings.

# Auto standby

When playing a disc or a USB storage device, automatically switch your home theater to standby if:

- it is in pause or stop mode, and
- no button is pressed for 30 minutes.
- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- Select [Preference] > [Auto Standby] > [On], and then press OK.

# Sleep timer

Set timers to switch the home theater to standby after a specified time.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Sleep Timer], and then press OK.
- 4 Select the duration of the sleep timer.
  - → The sleep timer can be set up to 60 minutes. If the sleep timer is set to [Off], it switches off.
- **5** Press **OK** to activate.
  - → The home theater switches to standby after the specified time.

#### Screen saver

Automatically switch your home theater to screen saver mode if:

- it is in pause or stop mode, and
- no button is pressed for 10 minutes.
- Press **\(\Pi\)** (**Home**).
- Select [Setup], and then press OK.
- 3 Select [Preference] > [Screen Saver] > [On], and then press OK.

## Display panel

Change the brightness of the home theater display panel.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Display Panel], and then press OK.
- 4 Select the brightness, and then press **OK**.

# Apply factory settings

Reset your home theater to the default settings. You cannot reset the parental control settings.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Restore default settings], and then press OK.
- 4 Select [OK], and then press OK.

### 9 Update software

To continue to get the best features and support for your home theater, update the software regularly. Compare the version of your current software with the latest version on www.philips.com/support.

#### Check software version

1 Press ♠ (Home).

2 Select [Setup], and then press OK.

Select [Advanced] > [Version Info.], and then press OK.

→ The software version is displayed.

# Update software through the Internet

- 1 Connect your home theater to the network. Use a
  - wired network connection (see 'Set up the wired network' on page 15), or
  - wireless network connection (see 'Set up the wireless network' on page 16).
- Press ♠ (Home).
  - Select [Setup], and then press OK.
  - Select [Advanced] > [Software Update] > [Network].
    - → If an upgrade media is detected, you are prompted to start or cancel the update.
- 5 Follow the instruction on the TV to confirm the update.
  - → When the software update is complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it..



 If the home theater cannot connect to the Philips server, press ♠ (Home), and then select [Setup] > [Network] > [Network Installation] to set up the network.

### Update software through USB

#### What you need

- A USB flash drive, with at least 75MB of memory. The USB flash drive must be FAT or NTFS formatted. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows® or Stufflt® for Macintosh®).

#### Step 1: Download the latest software

- 1 Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips. com/support.
- At the Philips Support website, find your product and locate the **Software and** drivers.
  - The software update is available as a zip
- 4 Save the zip file in the root directory of your USB flash drive.
- Use the archive utility to extract the software update file in the root directory of the USB flash drive.
  - → The files are extracted under the **UPG\_**ALL folder of your USB flash drive.
- 6 Disconnect the USB flash drive from your computer.

#### Step 2: Update the software



#### Caution

- Before you connect the USB flash drive to your home theater, make sure that there is no disc in the disc compartment, and the disc compartment is closed.
- Connect the USB flash drive to your home theater.
- 2 Switch your TV to the correct source for your home theater.
- **3** Press **♠** (**Home**), and then select [**Setup**].
- 4 Select [Advanced] > [Software Update] > [USB].
- Follow the instructions on the TV to confirm the update.
  - → When the software update is complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds, and then reconnect it.



#### Note

 When the software update is in progress, do not turn off the power or remove the USB flash drive.

# 10 Product specifications



#### Note

 Specifications and design are subject to change without notice.

#### Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

nome theater shows will	ci i egions it sup	)OI LS.
Country	DVD	BD
Europe, United Kingdom		
Asia Pacific, Taiwan, Korea		
Latin America		
Australia, New Zealand		
Russia, India		0
China		

#### Media formats

 AVCHD, BD, BD-R/BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX Plus HD media, USB storage device

#### File formats

- Audio: .aac, .mka, .mp3, .wma, .wav, .mp4, .m4a
- Video:
  - .avi, .divx, .mp4, .mkv, .asf, .wmv, .mpg, .mpeg,
  - .rmvb, .rm (Available only in Asia Pacific and China)
- Picture: .jpg, .jpeg, .gif, .png

#### Audio formats

Your home theater supports the following audio files.

Extension	Container	Audio codec	Bit rate
.mp3	MP3	MP3	32 kbps ~ 320 kbps
.wma	ASF	WMA	64 kbps ~ 160 kbps
.aac	AAC	AAC, HE- AAC	192 kbps
.wav	WAV	PCM	1.4 Mbps
.m4a	MKV	AAC	192 kbps
.mka	MKA	PCM	27.648 Mbps
.mka	MKA	AC-3	640 kbps
.mka	MKA	DTS core	1.54 Mbps
.mka	MKA	MPEG	912 kbps
.mka	MKA	MP3	32 kbps ~ 320 kbps
.mka	MKA	WMA	64 kbps ~ 160 kbps
.mka	MKA	AAC, HE- AAC	192 kbps

#### Video formats

If you have a high definition TV, your home theater allows you to play your video files with:

- Resolution: 1920 x 1080 pixels at
- Frame rate: 6 ~ 30 frames per second.

#### .avi files in AVI container

Audio codec	Video codec	Bit rate
PCM, AC-3, DTS core, MP3, WMA	DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x	10 Mbps max
	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)
	WMV9	20 Mbps

#### .divx files in AVI container

Audio codec	Video codec	Bit rate
PCM, AC-3, MP3, WMA	DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x	10 Mbps max
	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max

#### .mp4 or .m4v files in MP4 container

Audio codec	Video codec	Bit rate
AC-3, MPEG, MP3, AAC, HE-AAC	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)

#### .mkv files in MKV container

Audio codec	Video codec	Bit rate
PCM, AC-3, DTS core, MPEG, MP3, WMA, AAC, HE- AAC	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)

MPEG 4 ASP	10 Mbps max
H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)
WMV9	20 Mbps

#### .asf and .wmv files in ASF container

Audio codec	Video codec	Bit rate
PCM, AC-3, MP3, WMA	MPEG 4 ASP	10 Mbps max
	H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)
	WMV9	20 Mbps

#### .mpg and .mpeg files in PS container

Audio codec	Video codec	Bit rate
PCM, DTS core, MPEG, MP3	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)

### .rm and .rmvb files in RM container (Available only in Asia Pacific and China)

Audio codec	Video codec	Bit rate
AAC,	RV30,	20 Mbps (peak 40
COOK	RV40	Mbps)

#### **Amplifier**

- Total output power: 500W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX1, AUX2: 500 mV
  - Music iLink: 250 mV

#### Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

#### Audio

- S/PDIF Digital audio input:
  - Coaxial: IEC 60958-3
  - Optical: TOSLINK
  - Sampling frequency:
    - MP3: 32 kHz, 44.1 kHz, 48 kHz
    - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 32 kbps 320 kbps
  - WMA: 48 kbps 192 kbps

#### Radio

- Tuning range:
  - Europe/China: FM 87.5-108 MHz (50 kHz)
  - Asia Pacific/Russia/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 55 dB
- Frequency response: FM 60 Hz-12.5 kHz / ±3 dB

#### **USB**

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32, NTFS
- Maximum memory support: < 160 GB</li>

#### Main unit

- Dimensions (WxHxD): 307.2 x 68.8 x 304.4 mm
- Weight: 2.4 kg

#### Subwoofer

- Power supply:
  - Europe/China: 220-240 V~, 50 Hz
  - Latin America/Asia Pacific: 110-127 V/220-240 V~, 50-60 Hz
  - Russia/India: 220-240 V~, 50 Hz
- Power consumption: 100 W
- Standby power consumption: ≤ 0.5 W
- Impedance: 3 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Frequency response: 20 Hz-150 Hz
- Dimensions (WxHxD): 196 x 397 x 342 mm
- Weight: 6.1 kg
- Cable length: 3 m

#### Speakers

- Total output power: 2 x 135W RMS (30% THD)
- Speaker impedance: 5 ohm
- Speaker drivers: 2 x 76.2 mm (3") woofer + 1 x 31.8 mm (1.25") tweeter
- Frequency response: 150 Hz-20 kHz
- Dimensions (WxHxD): 99 x 334 x 130.6 mm
- Weight: 3.3 kg/each
- · Cable length: 4 m

#### Remote control batteries

2 x AAA-R03-1.5 V

#### Laser

- Laser Type (Diode): InGaN/AIGaN (BD), AIGaInP (DVD/CD)
- Wave length: 405 +7 nm/-7 nm (BD), 655 +10 nm/-10 nm (DVD), 790 +10 nm/-20 nm (CD)
- Output power (Max. ratings): 20 mW (BD), 6 mW (DVD), 7 mW (CD)

### 11 Troubleshooting



#### Warning

 Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

#### Main unit

#### The buttons on the home theater do not work.

 Disconnect the home theater from the power supply for a few minutes, then reconnect.

#### **Picture**

#### No picture.

 Make sure that the TV is switched to the correct source for the home theater.

#### No picture on a TV connected through HDMI.

- Make sure that you use a High Speed HDMI cable to connect the home theater and TV.
   Some Standard HDMI cables do not display properly for some images, 3D video, or Deep Color.
- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- Press (Home) and then 731 on the remote control to restore the default picture resolution.
- Change the HDMI video setting, or wait for 10 seconds for auto recovery (see 'Picture resolution' on page 32).

#### Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

#### Sound

#### No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices. You do not need a separate audio connection when:
  - the home theater and TV are connected through an HDMI ARC connection, or
  - a device is connected to the HDMI IN connector on your home theater.
- Set up the audio for the connected device (see 'Set up audio for connected devices' on page 15).
- Reset your home theater to its factory settings, switch it off, and then switch it on again.
- On your home theater, press > SOURCE repeatedly to select the correct audio input.

#### Distorted sound or echo.

 If you play audio from the TV through the home theater, make sure that the TV is muted.

#### Audio and video are not synchronized.

1) Press III SOUND SETTINGS. 2) Press
the Navigation buttons (left/right) to select
AUD SYNC, and then press OK. 3) Press
the Navigation buttons (up/down) to
synchronize the audio with the video.

#### Play

#### Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 36).
- Make sure that the home theater supports the region code of the disc (see 'Region codes' on page 36).
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

#### Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

### DivX or RMVB/RM subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 21).
- Select the correct character set: 1) Press **:=** OPTIONS. 2) Select [Character Set]. 3) Select the supported character set. 4) Press OK.

### Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater.

#### 'No entry' or 'x' sign appears on the TV.

• The operation is not possible.

#### EasyLink does not work.

 Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is on (see 'EasyLink' on page 30).

### When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

#### Cannot access BD-Live.

- Make sure that the home theater is connected to the network. Use a wired network connection (see 'Wired connection' on page 15) or wireless network connection (see 'Wireless connection' on page 16).
- Make sure that the network is set up.
  Use a wired network installation (see 'Set
  up the wired network' on page 15) or
  wireless network installation (see 'Wireless
  connection' on page 16).
- Make sure that the Blu-ray disc supports BD-Live.
- Clear memory storage (see 'Clear memory' on page 20).

### Cannot play video or photos from an iPod or iPhone on the TV.

- Browse and select videos and photos from the iPod or iPhone screen, and play them on your TV.
- Make sure that the iPhone or iPod software has not been tampered with or illegally modified.

### Cannot view pictures from an iPod or iPhone on the TV.

- Make sure that your home theater is connected to a TV through an HDMI cable.
- Switch the TV to the AV/VIDEO source (corresponding to the HDMI cable).
- Press the Navigation buttons and OK on the home theater remote control to select and play.
- Make sure that the iPhone or iPod software has not been tampered with or illegally modified.

#### Play 3D video in 2D mode.

- Make sure that your home theater is connected to a 3D TV through an HDMI cable.
- Make sure that the disc is a Blu-ray 3D disc, and the Blu-ray 3D video option is on (see 'Blu-ray 3D video' on page 32).

### TV screen is black when you play a Blu-ray 3D video or a DivX copy protected video.

- Make sure that the home theater is connected to the TV through an HDMI cable.
- Switch to the correct HDMI source on the TV

### Cannot download video from an online video store.

- Make sure that your home theater is connected to the TV through an HDMI cable.
- Make sure that the SD card is formatted, has enough memory to download the video, and is of type SDHC Class 6.
- Make sure that you have paid for the video, and it is within the rental period.
- Make sure that the network connection is good. Use a wired network connection (see 'Wired connection' on page 15) or a wireless network connection (see 'Wireless connection' on page 16).
- Visit the video store website for more information.

#### Network

#### Wireless network distorted or not found.

- Make sure that the wireless network is not disturbed by microwave ovens, DECT phones, or other neighboring Wi-Fi devices.
- If the wireless network does not work properly, try a wired network installation (see 'Set up the wired network' on page 15).

## 12 Language code

Abkhazian	6566	Inupiaq	7375	Pushto	8083
Afar	6565	Irish	7165	Russian	8285
Afrikaans	6570	Íslenska	7383	Quechua	8185
Amharic	6577	Italiano	7384	Raeto-Romance	8277
Arabic	6582	lvrit	7269	Romanian	8279
Armenian	7289	lapanese	7465	Rundi	8278
Assamese	6583	lavanese	7486	Samoan	8377
Avestan	6569	Kalaallisut	7576	Sango	8371
Aymara	6589	Kannada	7578	Sanskrit	8365
Azerhaijani	6590	Kashmiri	7583	Sardinian	8367
Bahasa Melayu	7783	Kazakh	7575	Serbian	8382
Bashkir	6665	Kernewek	7587	Shona	8378
Belarusian	6669	Khmer	7577	Shqip	8381
Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bislama	6673	Komi	7586	Slovensky	8373
Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bosanski	6683	Kuanyama; Kwanyama	7574	Somali	8379
	6682	Kuanyama, Kwanyama Kurdish	7585	Sotho: Southern	8384
Brezhoneg Bulgarian	6671	Lao	7679	South Ndebele	7882
Burmese	7789	Latina	7665	Sundanese	8385
	6983	Latvian	7686	Suomi	7073
Castellano, Español				Swahili	8387
Catalán	6765	Letzeburgesch;	7666	Swaniii	
Chamorro	6772	Limburgan; Limburger	7673		8383
Chechen	6769	Lingala	7678	Svenska	8386
Chewa; Chichewa; Nyanj		Lithuanian	7684	Tagalog	8476
中文	9072	Luxembourgish;	7666	Tahitian	8489
Chuang; Zhuang	9065	Macedonian	7775	Tajik	8471
Church Slavic; Slavonic	6785	Malagasy	7771	Tamil	8465
Chuvash	6786	Magyar	7285	Tatar	8484
Corsican	6779	Malayalam	7776	Telugu	8469
Česky	6783	Maltese	7784	Thai	8472
Dansk	6865	Manx	7186	Tibetan	6679
Deutsch	6869	Maori	7773	Tigrinya	8473
Dzongkha	6890	Marathi	7782	Tonga (Tonga Islands)	8479
English	6978	Marshallese	7772	Tsonga	8483
Esperanto	6979	Moldavian	7779	Tswana	8478
Estonian	6984	Mongolian	7778	Türkçe	8482
Euskara	6985	Nauru	7865	Turkmen	8475
Ελληνικά	6976	Navaho; Navajo	7886	Twi	8487
Faroese	7079	Ndebele, North	7868	Uighur	8571
Français	7082	Ndebele, South	7882	Ukrainian	8575
Frysk	7089	Ndonga	7871	Urdu	8582
Fijian	7074	Nederlands	7876	Uzbek	8590
Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Gallegan	7176	Norsk	7879	Volapuk	8679
Georgian	7565	Northern Sami	8369	Walloon	8765
Gikuyu; Kikuyu	7573	North Ndebele	7868	Welsh	6789
Guarani	7178	Norwegian Nynorsk;	7878	Wolof	8779
Gujarati	7185	Occitan; Provencal	7967	Xhosa	8872
Hausa	7265	Old Bulgarian; Old Slavonic	6785	Yiddish	8973
Herero	7290	Oriya	7982	Yoruba	8979
Hindi	7273	Oromo	7977	Zulu	9085
Hiri Motu	7279	Ossetian; Ossetic	7983		
Hrwatski	6779	Pali	8073		
Ido	7379	Panjabi	8065		
Interlingua (Internationa		Persian	7065		
Interlingue	7365	Polski	8076		
Inuktitut	7385	Português	8084		

13 Index		browse	
13 IIIdex		disc	18
		from iPhone	2.5
2		from iPod	24
_	40	Net TV	28
2D video	18	online video stores	29
		PC.	26
3		USB storage device	20
		built-in Wi-Fi	16
3D	4.0		
3D disc in 2D mode	18		
3D safety	8	C	
3D video	18	care	
		environment	-
^		health	,
A		product	-
advanced		character set	22
BD-Live security	20	close disc compartment	
enhanced audio	32	computer	,
restore default settings	34	connect to	15
software update	35	DLNA	26
software version	35	media server software	26
amplifier	38	computer network	15
audio		connect	1.
formats	37	audio (analog cable)	14
HDMI audio	32	audio (analog cable) audio (coaxial cable - digital)	1-
input mapping	31	audio (coaxiai cable - digital)	1-
language	33	audio (optical cable - digital) audio from TV and other devices	1-
night mode	32		26
options	22	computer home network	1.5
post processing	32	PC	26
predefined modes	17		11
quality	14	speakers	1.5
settings	32	to Internet	1.
source	15	TV (Composite) TV (HDMI ARC)	13
specifications	38	TV (HDMI)	1.
subwoofer volume	11	` ,	1.
audio formats	37	connectors contar	12
audio input mapping	31	back connectors - center back connectors - left	12
audio language	33		12
audio options	22	back connectors - right	12
auto standby	34	side connector-right side connectors-left	12
		control	1.2
		disc play	18
В		Easylink (HDMI-CEC)	10
bass	18	main unit	{
BD-Live		parental control	33
BD-Live (SD card)	20	radio	2.
BD-Live (USB)	19		2.
clear memory	20	USB storage device	Z
disable	20		
troubleshooting	40		
Blu-ray	18		
Bonus View	19		
brightness	34		

D		F	
disable		factory settings	34
audio post processing	32	FAQs	4
BD-Live	20	FM antenna	12
HDMI-CEC	30	format	38
discs		format SD card	29
2D video	18		
3D disc in 2D mode	18		
3D video	18	Н	
audio	22	HDMI	
audio language	33	audio	32
BD-Live	19	Deep color	32
Bonus View	19	TV (HDMI ARC)	13
control buttons	18	video	32
DivX	21	HDMI-CEC	30
eject disc	8	help	
menu language	33	navigate	2
options	22	read	2
picture	23	update	3
picture-in-picture	19	•	
play	18		
subtitles	33		
synchronize picture and sound	19	Internet	
time search	22	BD-Live	19
titles	22	connect to	15
display panel	8	online video stores	29
DivX		update home theater software	35
character set	22	iPhone	
subtitles	21	browse disc or USB from iPhone	25
VOD code	21	iPhone as remote control	25
DLNA	26	iPod and iPhone	
dock your iPod or iPhone	24	dock your iPod or iPhone	24
		music	24
		Philips dock	12
E		video and slideshow	24
EasyLink (HDMI-CEC)			
audio input mapping	31	<u> </u>	
control buttons	10	L	
one-touch play	30	language	
one-touch standby	30	2nd audio language	19
system audio control	30	2nd subtitle language	19
eject disc	8	audio	33
enable		disc menu	33
auto standby	34	language code	42
auto subtitle shift	32	onscreen menu	33
BD-Live	20	subtitle	33
HDMI-CEC	30	legal notices	4
predefined sound mode	32		
screen saver	34		
energy			
auto standby	34		

34 34 34

34

brightness screen saver

sleep timer

M			
	26, 28	browse PC	26 12
Macintosh Twonky Media main unit		connectors	
	8	HDMI-CEC	30
overview	38 39 36 26	main unit Net TV online video stores remote control	8
specifications			28
troubleshooting			29 9, 9
media formats			
media server software		settings	31
Microsoft Windows Media Player 11	26		
Microsoft Windows Media Player 12	27		
MP3	2.4	Р	
play	24	parental control	
multimedia content	4.0	password	33
from disc	18	ratings	33
from online stores	29	password	33
from PC	26	PC	22
from USB storage device	20	connect to	15
		DLNA	26
N		media server software	26
Net TV		Philips Easylink	30
access	28	picture	22
clear browsing history	29	options	23
location	29	rotate	22
online video stores	29	settings	22
watch Net TV page	28	slideshows	23
network		troubleshooting	39
built-in Wi-Fi	16	zoom	22
home network	15	picture options	22
name a device	16	picture-in-picture	
settings	15	2nd audio language	19
troubleshooting	41	2nd subtitle language	19
update home theater software	35	play	
wired connection	15	discs	18
wireless connection	16	DivX	21
night mode	32	from PC	28
iligiit illode	32	MP3	24
		online video	29
$\circ$		radio	38
	20	troubleshooting	40
one-touch play	30	USB	20
one-touch standby	30	position	
online video stores	20	connectors	12
format SD card	29	position	11
rent and play video	29	subtitles	33
troubleshooting	40	power options	33
open disc compartment	8	brightness	34
open source software	4	9	34
options		screen saver	34
audio	22	sleep timer	34
picture	23	standby	34
video	22		

preference		password	33
audio	32	picture	31
auto standby	34	power	34
auto subtitle shift	32	ratings	33
change password	33	resolution	32
disc menu	33	restore	34
display panel	34	screen saver	34
menu language	33	sleep timer	34
parental control	33	standby	34
•	34	•	33
screen saver	34	subtitle language	31
sleep timer		video .	
subtitle	33	side connectors	12
product specifications	36	sleep timer	34
		slideshows	0.0
D		animation	23
R		duration	23
radio		musical	23
control buttons	23	picture	23
FM antenna	12	software	
listen to radio	24	check current version	35
specifications	38	electronic user manual	3
tune stations	23	update	35
ratings	33	sound	
recycling	7	auto volume	17
region codes	36	bass	18
remote control	30	equalizer	18
batteries	39	mode	17
overview	9	surround sound	17
rent video	7	synchronize picture and sound	19
	29	,	18
format SD card		treble	
online video stores	29	troubleshooting	40
troubleshooting	40	speaker setup	4-
repeat	22	predefined modes	17
		settings	32
<u> </u>	_	speakers	
S		2.1 speakers	11
safety		connect	11
disposal	7	position	11
use of the product	6	specifications	39
watching 3D	8	surround sound	17
screen saver	34	specifications	36
SD card	29	standby	34
settings		subtitle	
3D video	32	character set	22
audio	32	language	33
auto subtitle shift	32	position	32
default	34	subwoofer	
disc language	33	specifications	39
	32	subwoofer volume	11
HDMI audio		synchronize picture and sound	19
HDMI video	32	system audio control	30
HDMI-CEC	30	system audio control	30
menu language	33		
parental	22		
password	33		
ratings	33		

1	22
time search	22
titles	22 4
trademarks	18
treble	18
troubleshooting	20
connection	39 39
main unit	39 41
network	39
picture	
play	40
serial number	4
sound	40
tutorials	4
1.1	
U update software	
check current version	35
electronic user manual	3
	35
from a USB storage device	35
from network	35
USB storage device	24
control buttons	21
options	22
play	20
specifications	38
update home theater software	35
user manual	2
download	2
navigate	2
read	2 2 3
update	3
V	
<b>V</b> video	
HDMI deep color	32
online video	29
options	22
picture resolution	32
•	31
picture settings	38
specifications	
synchronize picture and sound	19 24
video and slideshow	
VOD code for DivX	21
watch 3D	18
video formats	38
video on demand	20
format SD card	29
online video stores	29
video options	22
VOD code for DivX	21

W	
wired network	
settings	16
wired connection	15
wireless network	
built-in Wi-Fi	16
settings	16
wireless connection	16

